

Release Notes for the AMCC PPC405EX BSP#

System requirements#

Target system#

- QNX Neutrino RTOS 6.4
- Processor: AMCC PPC405EX
- Board version: AMCC Kilauea - ~UDTech Kilauea405EX v1.2
- ROM Monitor version: U-Boot 1.3.3 (May 19 2008 - 12:55:31)
- 256M DDR2 SDRAM
- 64M Spansion NOR flash (S29GL512N)
- 64M Samsung NAND flash (K9F1208)

Host development system#

- QNX Momentics 6.4, one of the following host systems:
 - QNX Neutrino 6.4
 - Microsoft Windows Vista, XP SP2 or SP3, 2000 SP4
 - Linux Red Hat Enterprise Workstation 4 or 5, Red Hat Fedora Core 6 or 7, Ubuntu 6.0.6 LTS or 7, or SUSE 10
- Terminal emulation program (Qtalk, Momentics IDE Terminal, tip, HyperTerminal, etc.)
- RS-232 serial port
- NULL-modem serial cable (provided with the board)
- Ethernet link

Getting Started#

Starting Neutrino#

Step 1: Build the BSP

You can build a BSP OS image from the source code or the binary components contained in a BSP package. For instructions about building a BSP OS image, please refer to the chapter Working with a BSP in the Building Embedded Systems manual.

Step 2: Connect your hardware

- Connect one end of the serial cable to the first serial port UART0 (J13) of the Kilauea405EX board and the other end of the serial cable to the first serial port of your host machine (e.g. ser1 on a Neutrino host).
- If you have a Neutrino host with a serial mouse, you may have to move the mouse to the second serial port on your host, because some terminal programs require the first serial port.
- Connect the Ethernet cable to the upper RJ45 port namely Ethernet Port 0 (J23) on the Kilauea405EX board and plug in the other end of the Ethernet cable to your local network.

On your host machine, start your favorite terminal program with these settings:

- Baud: 115200
- Bits: 8
- Stop bits: 1
- Parity: none
- Flow control: none

Apply power to the target board. You should see output similar to the following:

```
U-Boot 1.3.3 (May 19 2008 - 12:55:31)
```

```
CPU:  AMCC PowerPC 405EX Rev. C at 533.333 MHz (PLB=177, OPB=88, EBC=88 MHz)
```

```
Security support
```

```
Bootstrap Option H - Boot ROM Location I2C (Addr 0x52)
```

```
16 kB I-Cache 16 kB D-Cache
```

```
Board: Kilauea - AMCC PPC405EX Evaluation Board
```

```
I2C:  ready
```

```
DTT1: 38 C
```

```
DRAM: 256 MB
```

```
FLASH: 64 MB
```

```
NAND: 64 MiB
```

```
PCI:  Bus Dev VenId DevId Class Int
```

```
PCIE0: link is not up.
```

```
PCIE0: initialization as root-complex failed
```

```
PCIE1: link is not up.
```

```
PCIE1: initialization as root-complex failed
```

```
Net:  ppc_4xx_eth0, ppc_4xx_eth1
```

```
Type "run flash_nfs_fdt" to mount root filesystem over NFS
```

```
Hit any key to stop autoboot:  0
```

```
=>
```

Step 3: Setup the environment

Use the **printenv** command to show the current settings for **ipaddr**, **ethaddr**, **serverip** etc. On your target, type the following, filling in the appropriate IP addresses and ifs file:

```
=> setenv ipaddr 192.168.1.50
```

```
=> setenv serverip 192.168.1.19
```

```
=> setenv bootfile /tftpboot/ifs-kilauea405EX.raw
```

```
=> setenv loadaddr 0x200000
```

```
=> setenv bootcmd 'tftpboot $loadaddr $bootfile; go $loadaddr'
```

Once these parameters are configured, you can use the **saveenv** command to store your changes. Refer to the U-Boot documentation for more information.

Step 4: Boot the IFS image

You can use TFTP download (the default) or serial download to transfer the image from your host to the target.

This method requires a raw image, which is simply a binary image, with a header on the beginning, that allows the bootloader to jump to the very beginning of the image (the raw header), where it executes another jump to the first instruction of the image.

After U-boot is configured, boot the `ifs-kilauea405EX.raw` image as follows (we'll assume it's in a directory called `/tftpboot/`) from the U-boot prompt:

```
=> tftpboot 200000 /tftpboot/ifs-kilauea405EX.raw
```

At this point you should see the ROM monitor download the boot image, indicated by a series of number signs. You'll also see output similar to this when it completes downloading:

```
Waiting for PHY auto negotiation to complete.. done
```

```
ENET Speed is 100 Mbps - FULL duplex connection (EMAC0)
```

```
Using ppc_4xx_eth0 device
```

```
TFTP from server 192.168.1.19; our IP address is 192.168.1.50
Filename 'ifs-kilauea405EX.raw'.
Load address: 0x200000
Loading: #####
#####
#####
done
Bytes transferred = 2584580 (277004 hex)
=>
```

Now, to run the image, enter:

=> go 200000

You should see output similar to the following, with the QNX Neutrino welcome message on your terminal screen:

```
## Starting application at 0x00200000 ...

System page at phys:0000b000 user:0000b000 kern:0000b000
Starting next program at v0023ef1c
Welcome to QNX Neutrino 6.4 on the AMCC PPC405EX Evaluation Board
Starting Serial driver...
#
```

You can now test the OS simply by executing any shell builtin command or any command residing within the OS image (e.g. ls).

Step 5: Replace the U-Boot bootloader with a native QNX IPL and OS image in flash

At some point, you may wish to replace the U-Boot bootloader with the native QNX IPL code. This may be desirable once you've tweaked the OS image exactly the way you want it, and you want the board to boot the image automatically, immediately on power up.

To replace the U-Boot bootloader:

- 1.Modify your buildfile to generate a binary image.
- 2.Boot the board as described above, using U-Boot to TFTP-download the raw OS boot image.
- 3.Ensure that you can "see" the IPL image file `ipl-kilauea405EX` and the binary OS image file `ifs-kilauea405EX.bin` from the image. You can get them on the target using QCONN if you are using the Momentics IDE, or access them remotely over a NFS mount that you have configured on your network.
- 4.Start the flash filesystem driver and erase the last 128KB of NOR flash as follows:

```
devf-generic -s0xfc000000,64M
flashctl -p /dev/fs0 -o 65408K -l 128K -ve
```

- 5.Copy `ipl-kilauea405EX` to the flash, as follows:

```
dd if=ipl-kilauea405EX of=/dev/fs0 bs=131072 seek=511
```

- 6.To flash the OS image, erase the blocks of NOR flash starting from last 16 MB region (the following commands assume a maximum OS image size of 3 MB):

```
flashctl -p /dev/fs0 -o 48M -l 3M -ve
dd if=ifs-kilauea405EX.bin of=/dev/fs0 bs=131072 seek=384
```

When the copy is complete, you can reboot; it should now boot from the native QNX IPL. You should see output as follows:

QNX/Neutrino IPL for AMCC 405EX based Kilauea Board:

Commands:

d: download image to RAM

f: scan flash for image

IPL>

7. Enter f or F, and the board should boot from the OS image in flash. You'll see Neutrino boot:

System page at phys:0000b000 user:0000b000 kern:0000b000

Starting next program at v00245ea4

Welcome to QNX Neutrino 6.4 on the AMCC PPC405EX Reference Board

#

If desired, the IPL code can be modified to eliminate the prompt and automatically boot from the flash without user intervention. To do this, modify the <main.c> file of the IPL source, located under:

\$BSP_PATH/src/hardware/ipl/boards/kilauea405EX/

Creating a flash partition#

NOR flash

1. Start the NOR flash filesystem driver by issuing the following command:

```
devf-generic -s0xfc000000,64M
```

2. Prepare the area for the partition. Because the Linux images are in the first 22 MB of flash and U-Boot is in the last 640KB of flash, you may not want to erase them. Use the -l (length) and -o (offset) options to avoid these areas. Assuming that we want to create a 20 MB partition:

```
flashctl -p/dev/fs0 -o30M -l20M -ve
```

3. Format the partition:

```
flashctl -p/dev/fs0p0 -o30M -l20M -vf
```

4. Slay, then restart the driver:

```
slay devf-generic
```

```
devf-generic -s0xfc000000,64M
```

In this example, you have a 20 MB flash partition starting at an offset of 30 MB from the start of flash. You should now have a /fs0p1 mount on the target to which you can copy files.

NAND flash

1. Enter the following command to start the ETFS driver:

```
fs-etfs-kilauea405EX_512 -m/fs/etfs
```

2. Stop the filesystem on the device, format and continue:

```
etfsctl -d /dev/etfs2 -s -f -c
```

You should now have a /fs/etfs mount on the target to which you can copy files.

Summary of driver commands#

The following table summarizes the commands to launch the various drivers.

Component	Buildfile Command	Required Binaries	Required Libraries	Source Location
Startup	startup-kilauea405EX	.	.	src/hardware/startup/boards/kilauea405EX
Serial	devc-ser8250 - e -c11059200 -b115200 0xef600200,26 0xef600300,0x1	devc-ser8250	.	src/hardware/devc/ser8250
USB	io-usb - ddwcotg ioport=0xef6c0000,irq=94	io-usb usb	devu-dwcotg.so libusbdi.so	.
NOR	devf-generic - s0xf000000,64M	devf-generic flashctl	.	src/hardware/flash/boards/generic
NAND	fs-etfs-kilauea405EX_512 -m /fs/etfs	fs-etfs-kilauea405EX_512 etfsctl	.	src/hardware/etfs/nand512/kilauea405EX_512
PCI Express	pci-kilauea	pci-kilauea pci	.	src/hardware/pci/kilauea
Network	io-pkt-v4-hc -dppc405-kilauea405ex mac=001122334455,rmii -ptcpip	io-pkt-v4-hc ifconfig	devn-ppc405-kilauea405ex.so libsocket.so devnp-shim.so	src/hardware/devn/ppc405
I2C	i2c-ppc405 - p0xEF600400 - i2	i2c-ppc405	.	src/hardware/i2c/ppc405
SPI	spi-master - dppc405	spi-master	spi-ppc405.so	src/hardware/spi/ppc405
RTC	rtc hw	rtc date	.	src/utils/r/rtc

Some of the drivers are commented out in the default buildfile. To use the drivers in the target hardware, you'll need to uncomment them in your buildfile, rebuild the image, and load the image into the board.

PCI Express:#

Note:
The PCI Express interface can only be powered by standard ATX power supply. When using the PCI Express interface, you must

- Disconnect the 120/240V IN 5V/4A OUT power adapter
- Connect the ATX power supply
- Assemble jumper J14

Please note that you should NEVER connect more than one power source (e.g. ATX power supply, Power-over-Ethernet cable or separate power adapter) to the evaluation board at the same time.

Known issues for this BSP#

- In Microsoft Windows, certain programs (e.g. Norton Ghost) add directories inside double quotation marks (e.g. ..., "c:\Program Files\Norton Ghost\"; ...) to your **PATH** environment variable. This causes the Cygwin `spawn( )` function to fail, which in turn causes `cp` to fail when called by `ln -w`. (Ref# 20046) **Workaround:** Modify your **PATH** environment variable and remove any quotation marks.
- In those instances where the ROM monitor's MAC address is different from the one you pass in when running `io-net` and/or `io-pkt`, the host can cache the ROM monitor's address. This can result in a loss of connectivity. **Workaround:** If you need to specify a MAC address to `io-net` and/or `io-pkt`, we recommend that you use the same MAC address that the ROM monitor uses. This will ensure that if the host caches the ROM monitor's MAC address, you'll still be able to communicate with the target. Otherwise you might need to delete the target's arp entry on your host.
- Due to the limited number of channels (concurrent endpoints) supported by the USB controller, USB hubs are not officially supported. USB devices must be connected to the root port.
- The USB port doesn't supply enough power to enumerate certain high-power USB mice. In this case, a lower power mouse must be used.
- Other 405 reference boards have experienced problems with losing time on the order of 3-5 seconds per hour. (Ref# 71785)