

## USB #

Vendor	Model	Vendor:DeviceID	Drivers	Supported CPU	Notes	
Generic	USB Open Host Controller Interface	N/A	io-usb	ARM, MIPS, PPC, SH4, X86	USB host controller. Use -dohci to load the OHCI dll	
Generic	USB Universal Host Controller Interface	N/A	io-usb	ARM, MIPS, PPC, SH4, X86	USB Host controller. Use -duhci to load in the UHCI dll.	
Generic	USB Open Host Controllers for Amanda (Shle)	N/A	devu-ohci-amanda	SH4		
Intel	Enhanced Host Controller Interface	N/A	io-usb	ARM, MIPS, PPC, SH4, X86	USB 2.0 (High Speed) host controller. Use -dehci option to load EHCI dll.	
NEC	720100 OHCI / EHCI		io-usb	ARM, MIPS, PPC, SH4, X86	USB host controller. Use -dohci -dehci to load both the OHCI and EHCI DLLs.	
NEC	720101 OHCI / EHCI		io-usb	ARM, MIPS, PPC, SH4, X86	USB host controller. Use -dohci -dehci to load both the OHCI and EHCI DLLs.	
OPTi	82C61 OHCI controller		io-usb	ARM, MIPS, PPC, SH4, X86	USB host controller. Use -dohci option to load OHCI DLL.	
Philips	ISP1562 OHCI/EHCI controller		io-usb	ARM, MIPS, PPC, SH4, X86	USB host controller. Use -dohci -dehci options to load OHCI and EHCI DLLs	
VIA	VT83c572 UHCI		io-usb	X86	USB host controller. Use -duhci to load the UHCI DLL.	
VIA	VT6202 UHCI/EHCI controller		io-usb	X86	USB host controller. Use -dehci -duhci	

					to load EHCI and UHCI DLLs.	
--	--	--	--	--	-----------------------------------	--