

USB

| Vendor | Model | Vendor:DeviceID | Drivers | Supported CPU | Notes |
|---------|---|-----------------|------------------|--------------------------|---|
| Generic | USB Open Host Controller Interface | N/A | io-usb | ARM, MIPS, PPC, SH4, X86 | USB host controller. Use -dohci to load the OHCI dll |
| Generic | USB Universal Host Controller Interface | N/A | io-usb | ARM, MIPS, PPC, SH4, X86 | USB Host controller. Use -duhci to load in the UHCI dll. |
| Generic | USB Open Host Controllers for Amanda (Shle) | N/A | devu-ohci-amanda | SH4 | |
| Intel | Enhanced Host Controller Interface | N/A | io-usb | ARM, MIPS, PPC, SH4, X86 | USB 2.0 (High Speed) host controller. Use -dehci option to load EHCI dll. |
| NEC | 720100 OHCI / EHCI | | io-usb | ARM, MIPS, PPC, SH4, X86 | USB host controller. Use -dohci -dehci to load both the OHCI and EHCI DLLs. |
| NEC | 720101 OHCI / EHCI | | io-usb | ARM, MIPS, PPC, SH4, X86 | USB host controller. Use -dohci -dehci to load both the OHCI and EHCI DLLs. |
| OPTi | 82C61 OHCI controller | | io-usb | ARM, MIPS, PPC, SH4, X86 | USB host controller. Use -dohci option to load OHCI DLL. |
| Philips | ISP1562 OHCI/EHCI controller | | io-usb | ARM, MIPS, PPC, SH4, X86 | USB host controller. Use -dohci -dehci options to load OHCI and EHCI DLLs |
| VIA | VT83c572 UHCI | | io-usb | X86 | USB host controller. Use -duhci to load the UHCI DLL. |
| VIA | VT6202 UHCI/EHCI controller | | io-usb | X86 | USB host controller. Use -dehci -duhci |

| | | | | | | |
|--|--|--|--|--|-----------------------------------|--|
| | | | | | to load EHCI and UHCI DLLs. | |
|--|--|--|--|--|-----------------------------------|--|